



## GETTING STARTED WITH YOUR CABLE TV

Your furnished apartment comes with cable television. Please review the following steps to begin using your cable TV:

1. There are multiple remote controls in your furnished apartment:
  - a. A TV remote (has the name of the TV manufacturer on the front);
  - b. A cable remote (has the name of the cable provider on the front);
  - c. A DVD player remote; and
  - d. An Amazon Fire TV Stick remote.
2. Using the **TV REMOTE**, press “POWER” or “ON” button.
  - a. Your “input” or “source” should automatically be set to HDMI 1 for cable.
3. Wait for 5-10 seconds for TV to turn on (some models may take that long).
4. Put the TV remote control aside. You will only need this to adjust the volume or select another input, such as for playing a DVD on the DVD player (instructions below) or video streaming on the Amazon Fire TV Stick (instructions on the Amazon Fire TV page).
5. Using the **CABLE REMOTE**, press “CABLE” on the top of the remote, and then press “ON” or “ALL ON” button.
6. The first screen you see may be a guide or intro screen. Use the **CABLE REMOTE** to press the “channel up” button to begin viewing channels.
7. If the TV does not come on, check the batteries in your remote or try to turn it on from the TV itself. If this does not solve the problem, see our troubleshooting tips below.



## INSTRUCTIONS FOR WATCHING A DVD

1. Turn on your TV and using the **TV REMOTE**, set the “input” or “source” to HDMI 2. If you don’t have HDMI 2, look for AUX.
2. Turn on your DVD player and press the eject button to open the DVD drawer. Insert the DVD and close the drawer.
3. Press “PLAY” either on the DVD player itself, or using the **DVD REMOTE**.
4. Make some popcorn and enjoy!